



# Manual SunnyTent

## A. Safety guidelines

- Warning: Not suitable for children under 3 years old; risk of entanglement / strangulation and pinched hands, feet, fingers and toes!
- Warning: Risk of drowning. Don't let children play without supervision!
- Warning: Keep away from fire!
- Warning: When using disinfectants for swimming water, always follow the instructions carefully as indicated by the manufacturer / supplier of these agents!
- Warning: Only adults should set up a SunnyTent!
- Warning: Be careful not to stand on the pegs!
- Warning: Keep hands, fingers, feet and toes away from the hinge anchors / moving and pegs!
- Warning: The SunnyTent is never an alternative to continuous supervision by an adult!
- Warning: The SunnyTent can be used as a tent over an in-ground trampoline. But be aware that the SunnyTent is not a safety net. It is not intended to prevent people from accidentally falling off a trampoline. The SunnyTent is only meant to keep the trampoline (and the people on it) dry, clean and pleasantly warm!
- Warning: The SunnyTent can be used as a tent over a swimming pool. In addition to all other warnings, please note the following general rules regarding safety in the water:
  - Ensure constant supervision! When children use a swimming pool (with or without SunnyTent) an adult must always supervise!
  - Learn to swim!
  - Take a First Aid course and learn mouth-to-mouth resuscitation!
  - Make sure you are aware of the dangers of water and necessary safety precautions to be taken!
  - Make sure that the users of the swimming pool (with or without SunnyTent) are aware of what to do in the event of an accident!
  - Always use common sense when playing games and activities in and with water!
  - Supervise!
- Although a securely closed SunnyTent provides some protection for your swimming pool, it is not the intended function. Some protection is offered, but it is not the intended function that the SunnyTent will prevent people (including children) and / or (pets) from ending up in the pool accidentally. Ensure constant supervision of an adult.
- Warning: Do not swim or play in a fully closed SunnyTent.
  - Always ensure adequate ventilation (fresh air and safe temperatures); the SunnyTent Round must be at least 35% open and remain open when playing in / under it / swimming. The SunnyTent Oval must be open, at least on one long side to at least 1.70 m in height over the full width, if there are people in the pool.
  - With wind force or gusts with a force of 3 Bft or higher, do not play / swim in / under, a partially opened SunnyTent. This is to prevent someone from getting caught in or suffocated under / by the tent, if the SunnyTent collapses.
  - Only play or swim in a partially opened SunnyTent if there is constant supervision by an adult who is outside the SunnyTent. This is to prevent someone from getting caught or suffocated under / by the tent, if the SunnyTent collapses, as a result of wind (gusts) and / or wrongful installation of the SunnyTent and / or defects in the SunnyTent itself.
- Warning: Regularly check the SunnyTent for loose parts and any other defects. Repair any defects or potential problems before continuing to use the SunnyTent!

- Warning: If you use the SunnyTent after sunset or before sunrise, ensure that there is sufficient lighting to make sure all safety instructions are visible, the tent itself and the entrance and exit can be clearly seen!
- Warning: Also read all the other contents of this manual!
- Warning: All instructions and safety guidelines supplied with this product only indicate general risk and not specific hazards and dangers. Use common sense and sound judgment when undertaking any activities using the SunnyTent. Carefully read, understand and follow all instructions before installation and before each use!
- Warning: Failure to follow the safety guidelines and instructions for use may result in accidents. Sometimes resulting in extreme injury or even death!
- Warning: The SunnyTent is only intended for private use and therefore not for commercial and / or (semi) public / public applications!
- Warning: Ultimately, the user is responsible for the correct use of the SunnyTent!
- Warning: When you open your SunnyTent completely, mark the location of the twist pegs with the red plastic locking pegs. This makes the twist pegs more visible and helps to prevent anyone from getting hurt.
- Warning: When using a Cross-pole set in combination with the SunnyTent: When you open your tent completely, remove the poles / hoses of the Cross-pole set from the connecting pins and remove the connecting pins from the ground tubes to prevent accidental injury.

## B. Installation instructions

On our website ([www.sunnytent.com](http://www.sunnytent.com)) you will find the most current installation videos for all SunnyTent models / sizes. Study these videos carefully and follow all instructions and warnings carefully.

## C. Instructions for use

1. First read the **safety guidelines** carefully. Comply with these guidelines now and in the future.
2. Carefully study and comply with the usage guidelines included in the installation video now and in the future.
3. The SunnyTent can only be set up in places where the hinged anchors and pegs can be driven into the ground. For installation on a hard surface, the special "Hard Surface Kit" must be purchased. Do not place the SunnyTent on a hard surface without this Hard Surface kit. This kit will prevent wear on the underside (the bottom two pole tunnels). Such wear is not covered by the warranty.  
If the ground surface on which the SunnyTent is installed is not even, even when using our special "Hard Surface Kit", wear may still occur on the underside (the bottom two pole tunnels). You should therefore, only install a SunnyTent on a flat, level surface.
4. Very occasionally the SunnyTent tent foil can be damaged by a combination of the following factors:
  - In hot weather and extreme sunshine;
  - New tent foil (with a "fresh" anti-condensation wax layer on it), so usually only in the first season of use;
  - If the tent is fully or partially opened, with the layers of tent foil, laying behind the swimming pool on top of each other with bright sun shining directly on this "piled up" tent foil.

Under the influence of these factors, the wax melts and this wax can cause the layers of tent foil to stick together. If afterwards when the whole tent has cooled down and you pull the tent up, the layers of tent foil stick together and the tent foil may become somewhat distorted or malformed and small or larger holes may appear as a result.

To prevent this damage you must adhere to the following guidelines:

- During installation: During installation, do not place the tent foil in full sun, but always in the shade.
- In the first season of use: If the above factors occur, you should protect the layered tent foil behind the pool from the sunshine with a tent foil protector. This is available at [www.sunnytent.com](http://www.sunnytent.com). You can also use other very good insulating material (such as thick cardboard or garden furniture cushions). If the sun does not shine on this "tent foil pile", then it is not necessary. It is also advisable to pull the SunnyTent all the way up after use and close it, then the problem cannot occur.

In summary, this is especially true for new tent foils in the first season of use. After the first season of use, this problem will no longer occur.

5. You can use the SunnyTent for all kinds of **applications**. The most common / known applications are the covering of a swimming pool, sandpit, trampoline and vegetable garden. However, the SunnyTent is sometimes also used for the temporary storage of products that must remain dry. Please ensure that there is adequate ventilation so that mould does not appear on the stored items.
6. If you use an automatic **lawn mower** (robot), you must ensure that it cannot collide with the SunnyTent. This is to prevent damage.
7. You can close the SunnyTent completely, fully **open** it or partially open it.
  - Note: See the **safety guidelines!** Read this thoroughly to prevent physical injury or worse.

| <b>SunnyTent Round M, L, L+ or XL</b>   | <b>SunnyTent Oval M or L</b>   |
|---|--|
| With a low wind speed (expected), maximum wind force 3 Bft., you can leave the SunnyTent partially open (at approx. 35%), provided that the wind comes from the opposite side to the opening side and that the set of poles are installed properly. You must secure the partially opened tent with the included guy line (s), as described in the installation instruction.   | Take the wind into account when opening your SunnyTent. If there is a moderate or stronger wind blowing in the direction of one of the long sides, then open the tent on the other long side. When conditions are still, the tent can be opened on both sides.   |
| With wind speed (expected) and / or gusts of wind between 3 and 5 Bft. do not leave the tent partially open. This is especially true if the windy side is the same as the opening side of the tent, there is a danger that the wind could blow the tent down. In such cases, you must leave the tent either fully open or fully closed (and with all twist pegs secured) (Note: Do not swim / play in a closed SunnyTent!). | A fully and properly closed oval SunnyTent can withstand wind (and gusts) of up to a force 3 Bft. With the addition of the double Cross-pole set, this increases to 4 to 5 Bft. With stronger winds / gusts you must fold your SunnyTent all the way down (by detaching the 'head parts' and the 'intermediate part' from each other and lowering the tent completely to the ground (place something heavy, but not sharp, on the lowered tent so that the tent parts do not blow away). |
| With wind speed (expected) 5 Bft. or higher, you must open the SunnyTent completely (and lay it on the ground) and place something sufficiently heavy (without sharp parts) on it, so that the tent stays firmly in place.  | A SunnyTent that is partially open (on the long / straight side (s)) is more sensitive to wind than a closed SunnyTent. This of course strongly depends on how exposed the location of your SunnyTent is and whether the tent is open on the windward side or on the opposite side of the wind.  |
| Note: The entire opening (and later closing) of the SunnyTent must always be done by two adults.<br>Note: Never open the SunnyTent halfway, but about 35% or completely, as explained in the installation video.  | Always keep an eye on the wind force and wind direction when you open / leave your SunnyTent open. Always use common sense in this regard.   |

- If a strong wind (or gusts of wind) is expected or the wind is strong, you must carefully check all the pegs and hinge anchors. In strong winds, also use the plastic locking pegs to help secure the twist pegs. See the installation instructions for more detailed information.
  - In snow and freezing weather, snow and ice can accumulate on the SunnyTent. This can cause it to bend and possibly be damaged / broken. Therefore, if snow / freezing rain is expected, you must open the SunnyTent completely (and place it on the ground).
  - Never leave the SunnyTent partially open, unattended. Always keep a close eye on the weather and the weather forecast, to prevent the SunnyTent from blowing out of its hinge anchors, being damaged or causing damage to other things or third parties.
8. Do not leave the SunnyTent unattended unless you are 100% sure that the weather is calm and predictable (no strong wind (gusts), etc.). If you do, you run the risk of damage to the tent as a result of, for example, strong wind (gusts), snow or sleet. This damage is not covered by the warranty.

9. If you use the SunnyTent as a tent over your swimming pool, the location of the **skimmer** of your swimming pool needs attention. You should not place this on the opening sides of the tent of the pool, but as close to the anchor side as possible. There, the tent foil does not lay behind the skimmer when the SunnyTent is opened / closed. Always look carefully where the skimmer fits best in your case, so that the tent foil is not damaged.
10. The first rain showers create a **foamy substance** on the outside of the tent foil. This is a type of coating / wax that is processed on the foil, which ensures that no condensation droplets remain on the tent foil. The first rain partially rinses this type of coating off the tent foil. This does no harm to the tent or anyone using it. This wax has also been used on the inside of the tent foil to prevent condensation on the foil. As a result of splashing with water, a foam-like substance can also form here. This too is temporary in nature and can do no further harm.
11. Never use cleaning agents for the **maintenance / cleaning** of your SunnyTent. Such substances can cause the stitching, with which the different sheets of foil / tent canvas are sewn together, to wear out and / or fray more quickly. You must clean your SunnyTent by spraying the tent with cold water. Do not use a pressure / hard jet, lukewarm or warm water, brushes or other aids, all these can damage the protective layer of the tent foil, causing it to wear out more quickly and reducing the effectiveness of the anti-condensation layer.
12. Make sure that you **store** your SunnyTent at room temperature. If you place the SunnyTent close to a heating pipe or other heat source, there is a chance that the material of the tent can shrink.
13. If you use your SunnyTent in the winter, take the following into account:  
The SunnyTent does not protect your swimming pool or other items contained in it from frost (damage).
14. The temperature and humidity in the SunnyTent can increase considerably. Never place anything under the SunnyTent that is sensitive to this.

## D. Warranty provisions

1. The terms of this warranty apply only to the first owner. This warranty is not transferable and is valid for 2 years from the date of purchase. Save your original purchase invoice; this must be submitted in the event of a complaint. No guarantee is possible without this invoice.
2. If a production error occurs within the 2-year period, you can contact SunnyTent BV via its website [www.sunnytent.com](http://www.sunnytent.com). SunnyTent BV will handle the complaint with you and ask you to send the item for inspection. If your complaint is well-founded and the installation and user conditions are met, the item will be repaired or exchanged and returned to you at no cost to you. In all other cases, repair or replacement costs will be charged to you.
3. Assumed guarantees are only limited to the conditions of this guarantee. SunnyTent BV is in no way liable towards the buyer or other party for direct or consequential damage.
4. The warranty does not apply if the SunnyTent has been subject to neglect, accident, improper use, incorrect installation / set-up, failure to follow the instructions for use or harmful circumstances beyond SunnyTent BV's control, including and not limited to, normal wear and tear, fire, flooding, frost, freezing rain, snow or other forces of nature. In addition, actual changes to and / or use of own materials in combination with the SunnyTent invalidate the warranty.
5. Because the SunnyTent is outside for a long period of time, it is exposed to wind and weather. As a result, the metal parts can show rust after a while. However, this rust does not in any way prevent or hinder the use of the SunnyTent, and is therefore not covered by the warranty.
6. Carefully follow all instructions and conditions as shown in the installation video and described in the user manual. To do this, study the installation video and operating instructions regularly / repeatedly. Always check the SunnyTent before and after use. If you do not follow the instructions, the warranty will expire.